



42" SENTRY LIFEGUARD STAND

ASSEMBLY AND INSTALLATION INSTRUCTIONS



SRS AUSTRALIA, PTY LTD
12 Enterprise St
Richlands QLD 4077
Australia
Phone 07 3812 2283 • Fax 07 3812 1187
www.srsmith.com/au

S.R. SMITH, LLC
CORPORATE HEADQUARTERS
P.O. Box 400 • 1017 S.W. Berg Parkway
Canby, Oregon 97013
USA
Phone (503) 266 2231 • Fax (503) 266 4334
www.srsmith.com

TABLE OF CONTENTS

INTRODUCTION	3
INSTALLED LIFEGUARD STAND STRUCTURAL & INSTALLATION CHECKLIST	3
MAINTENANCE INSTRUCTIONS	3
ASSEMBLED LIFEGUARD STAND LAYOUT	4
PARTS LIST	5
Tools Required	7
Lifeguard Stand Assembly	7

INTRODUCTION



DANGER – FAILURE TO FOLLOW THESE WARNINGS, INSTRUCTIONS, AND THE OWNER’S MANUAL MAY RESULT IN SERIOUS INJURY.

PROPER ASSEMBLY, INSTALLATION, USE, AND SUPERVISION ARE ESSENTIAL FOR PROPER OPERATION AND TO REDUCE THE RISK OF SERIOUS INJURY.

CHECK INSIDE ALL BOXES AND PACKAGING MATERIALS FOR PARTS. BEFORE BEGINNING ASSEMBLY, READ ALL INSTRUCTIONS AND IDENTIFY PARTS USING THE FIGURES AND PARTS LISTED IN THIS DOCUMENT. IT IS CRITICAL THAT ALL PARTS BE CAREFULLY INSPECTED BY THE INSTALLER PRIOR TO INSTALLATION TO ENSURE THAT NO DAMAGE OCCURRED IN TRANSIT AND THAT A DAMAGED PART IS NOT USED. PROPER INSTALLATION CANNOT BE OVERSTRESSED, IMPROPER INSTALLATION VOIDS S.R. SMITH’S WARRANTY AND MAY AFFECT THE SAFETY OF THE USER.

 WARNING	
<ul style="list-style-type: none">• NO JUMPING OR DIVING FROM CHAIR• CHAIR MUST BE INSTALLED ON A LEVEL SURFACE• MAXIMUM WEIGHT LIMIT 250 LBS.• ONLY ONE PERSON ALLOWED ON THE CHAIR AT A TIME• CHAIR MUST BE PROPERLY ANCHORED IF USING AN UMBRELLA	
<small>06-151</small>	<small>DEC16</small>





INSTALLED LIFEGUARD STAND STRUCTURAL & INSTALLATION CHECKLIST

1. Inspect material for visible cracks or damage.
2. Inspect hardware for missing or damaged parts.
3. Inspect all fasteners to make sure they are fully tightened.
4. Inspect the Lifeguard Stand for rigidity (and attachment if using anchors).

MAINTENANCE INSTRUCTIONS


1. When hosing down the deck, hose your Lifeguard Stand to wash away any dust, dirt or other debris, which may have accumulated and wipe clean.
2. Be sure that all connections are secure. Tighten hardware if necessary and check for corroded fasteners.
3. Inspect for visible cracks or other damage.
4. Inspect all parts for evidence of shear, bending yield, or fatigue. Yield is evidenced by discoloration or fine cracking of the surface.

ASSEMBLED LIFEGUARD STAND LAYOUT

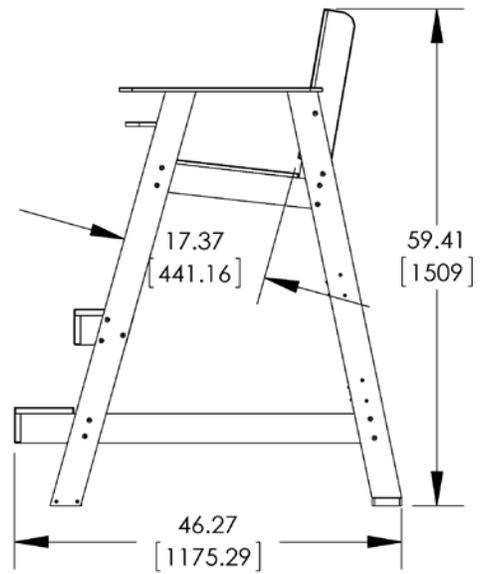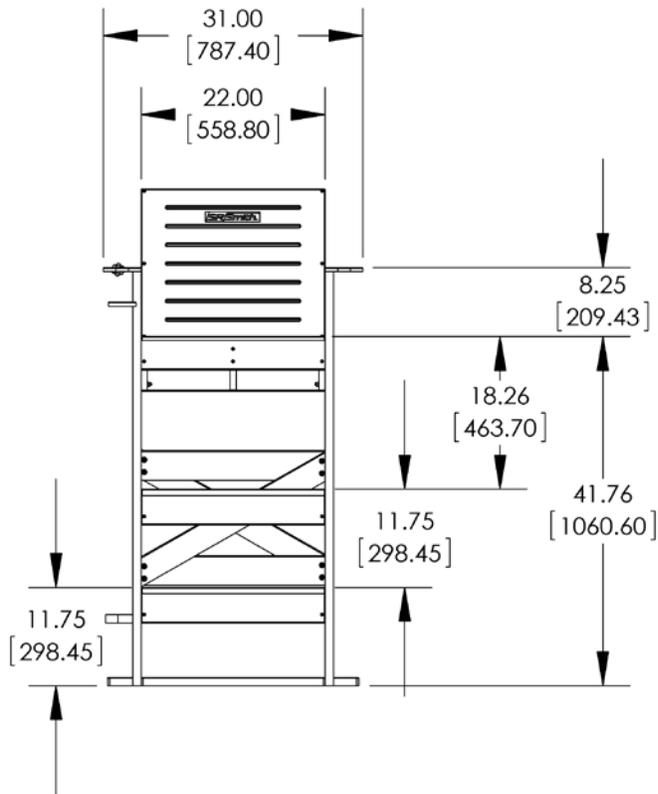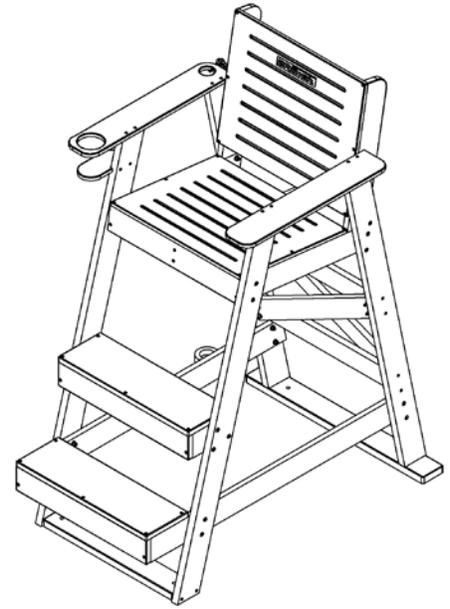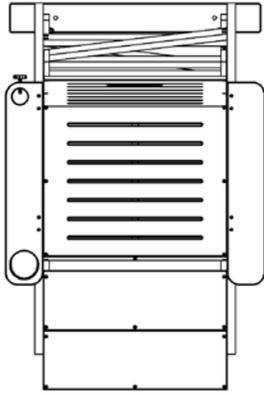

PARTS LIST

<u>Item #</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
1	03-500	FOOTREST & STEP, TOP	2
2	03-501	SEAT & BACK PLATE	2
3	03-502	SEAT SUPPORT, SIDE	2
4	03-503	SEAT SUPPORT, REAR	1
5	03-504	SEAT SUPPORT, CENTER	1
6	03-505	SEAT SUPPORT, FRONT	1
7	03-506	BACK SUPPORT, RIGHT	1
8	03-507	BACK SUPPORT, LEFT	1
13	03-512	42" FRONT LEG, RIGHT	1
14	03-513	42" FRONT LEG, LEFT	1
15	03-514	42" REAR LEG, RIGHT	1
16	03-515	42" REAR LEG, LEFT	1
17	03-516	FOOTREST, FRONT	2
21	03-520	42" FOOTREST SIDE, RIGHT	1
22	03-521	42" FOOTREST SIDE, LEFT	1
23	03-522	42" STEP, SIDE	2
24	03-523	42" CROSSBRACE, STRAIGHT	2
25	03-524A	42" CROSSBRACE A, ANGLED	1
26	03-524B	42" CROSSBRACE B, ANGLED	1
27	03-525	CUP HOLDER	1
28	03-526	UMBRELLA MOUNT	1
29	03-527	42" BASE, FRONT	1
30	03-528	42" BASE, REAR	1
31	03-529	ARM REST, LEFT	1
32	03-530	ARM REST, RIGHT	1
		<u>Hardware</u>	42" Chair
34	05-33-121	#8 X 2" SCREW, #2 SQUARE DRIVE, 316SS	66
35	05-33-123	1/4-20 NYLON-INSERT LOCKNUT, 316SS	34
36	05-33-124	1/4 FLAT WASHER, 316SS	34
37	05-33-125	1/4-20 X 2.25" FLAT HEAD HEX DRIVE SCREW, 316SS	34
38	05-33-126	1/4-20 X 1.75" PLASTIC ROSETTE HEAD THUMB SCREW, 316SS	1

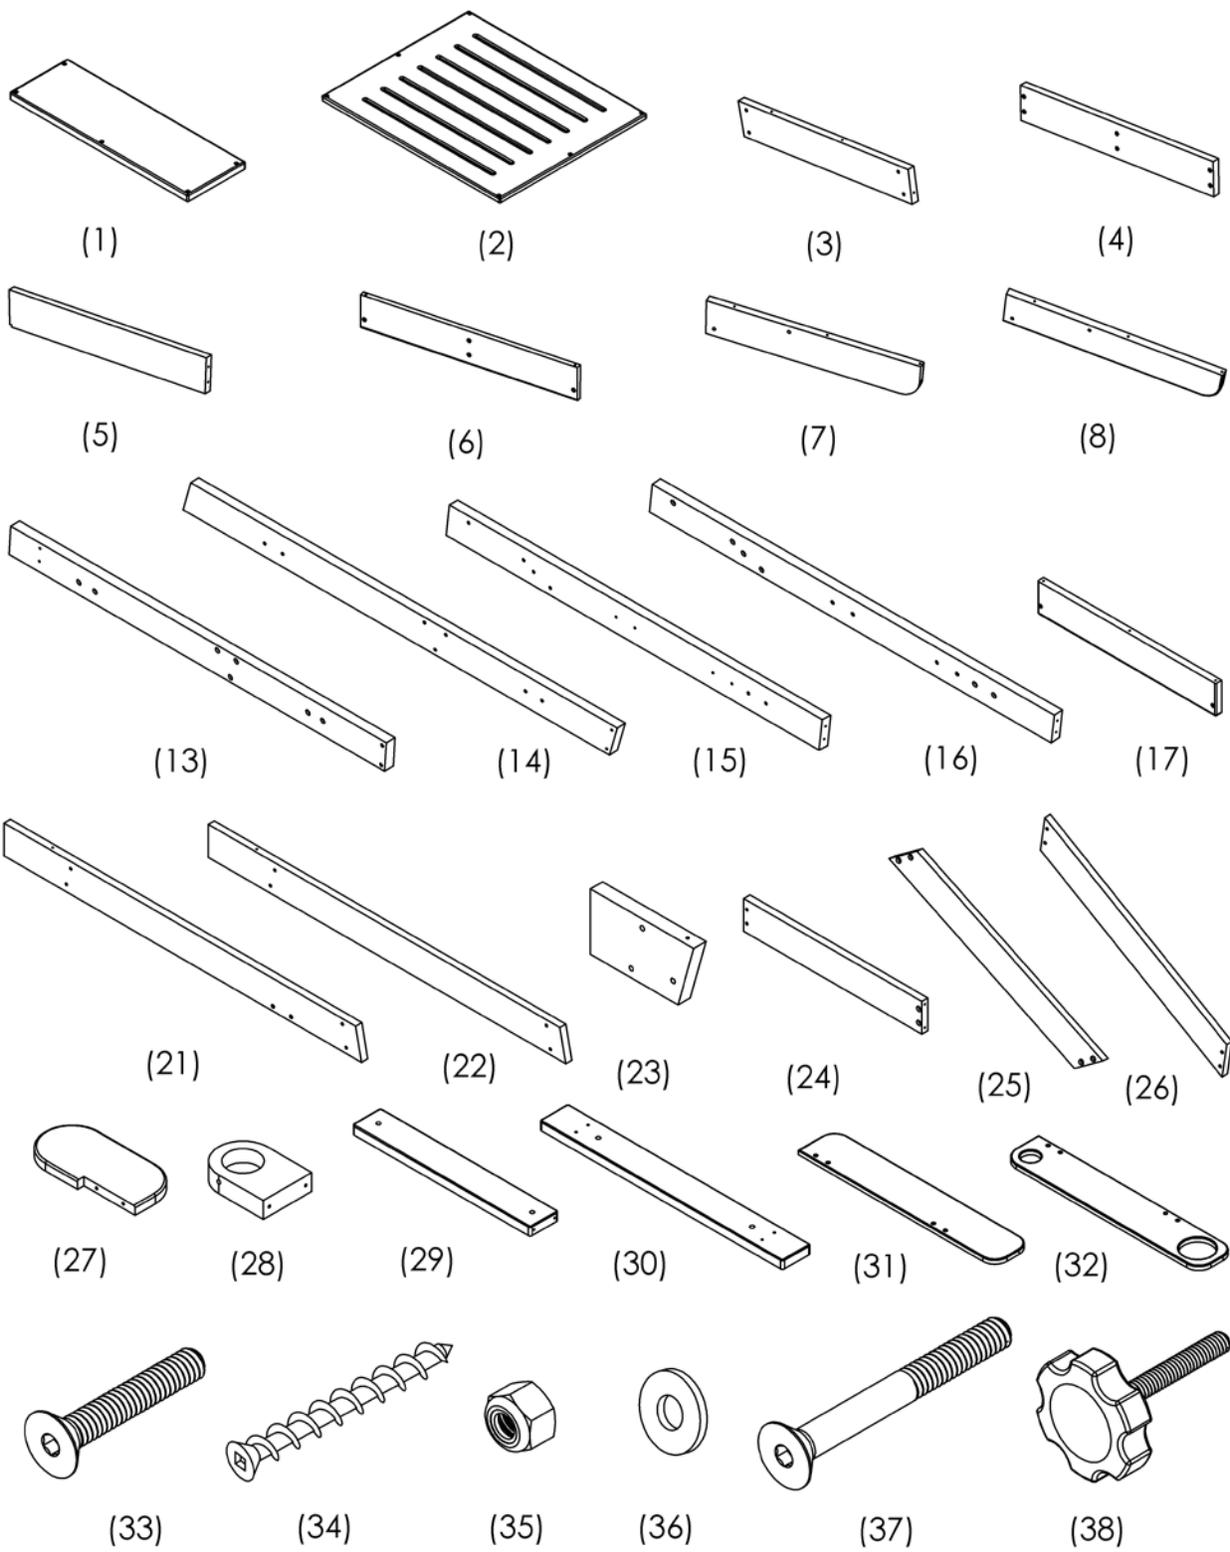

Visit srsmith.com for hardware kit and replacement part information.


ASSEMBLY INSTRUCTIONS

Tools Required


1. #2 Square Drive Bit
2. 5/32" Allen Wrench
3. 7/16" Ratchet or Wrench

Lifeguard Stand Assembly


1. Attach part (2) to part (3) as shown using screws (34).

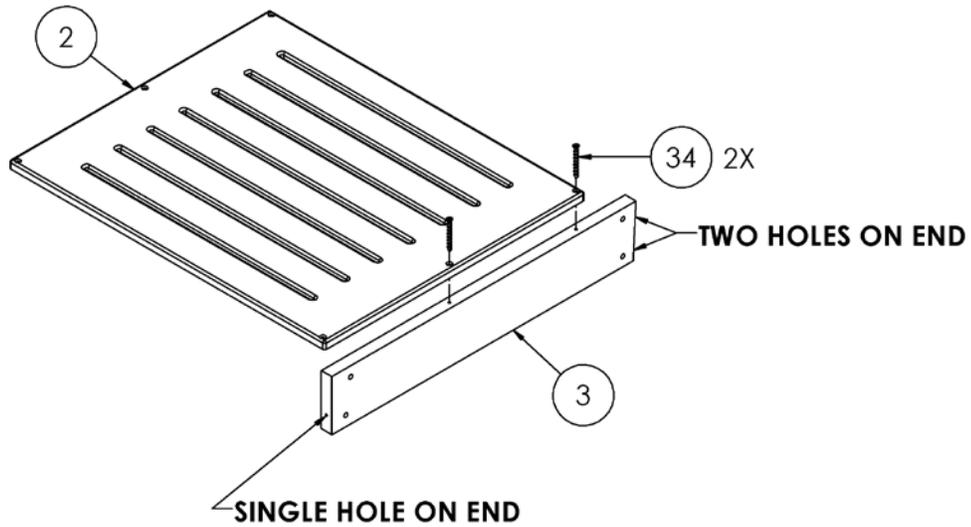


2. Attach part (3) to assembly using screws (34).

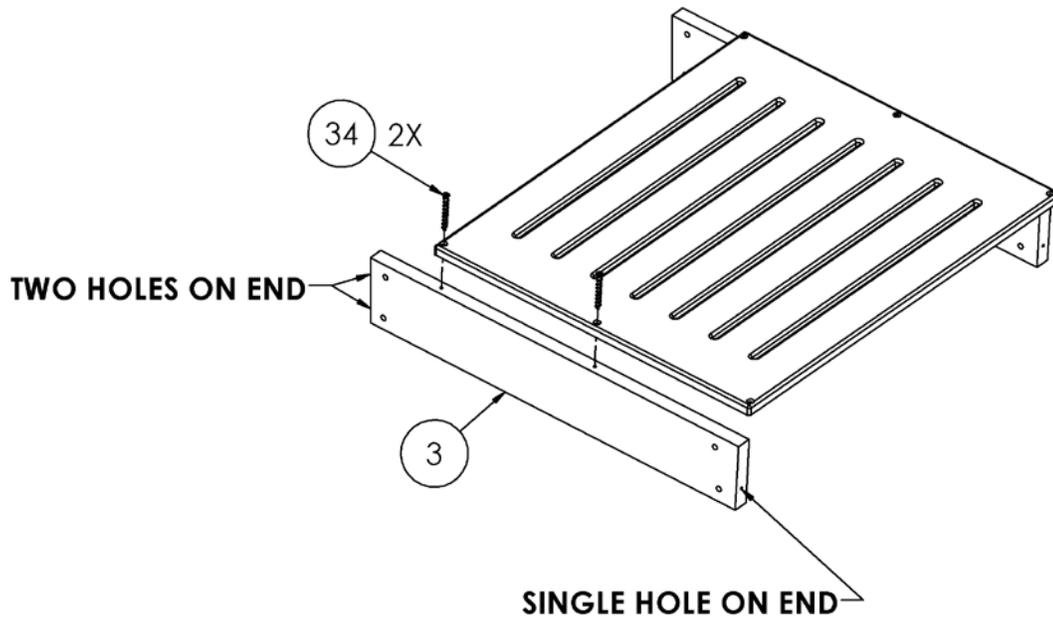


3. Attach part (4) to assembly with screws (34).

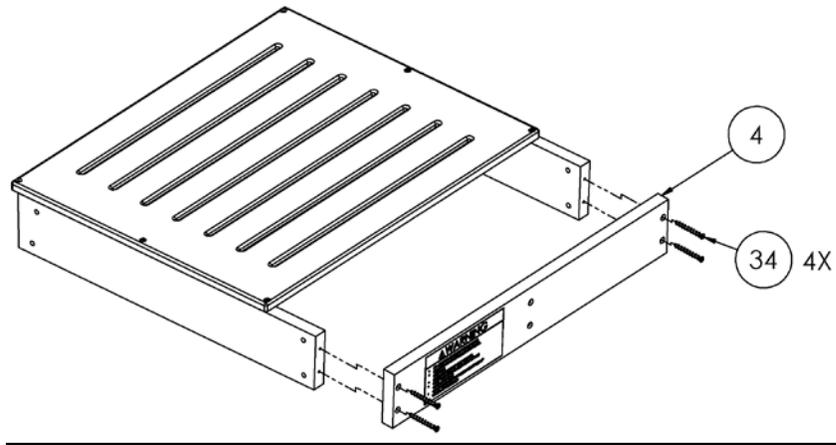


4. Attach part (5) with notch in direction shown to assembly using screws (34).

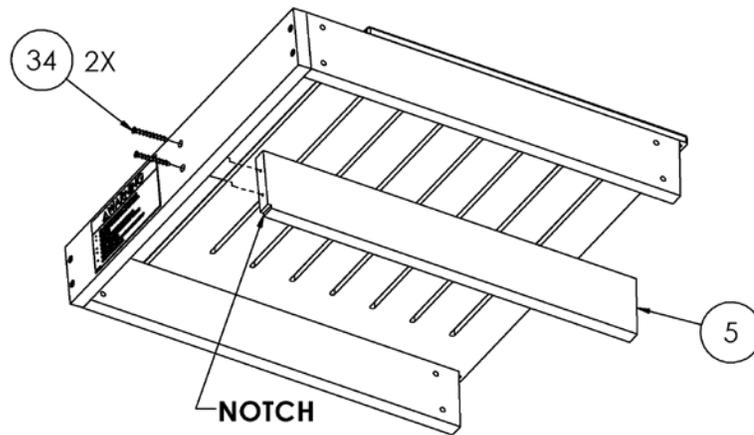


5. Attach part (6) to assembly with screws (34).

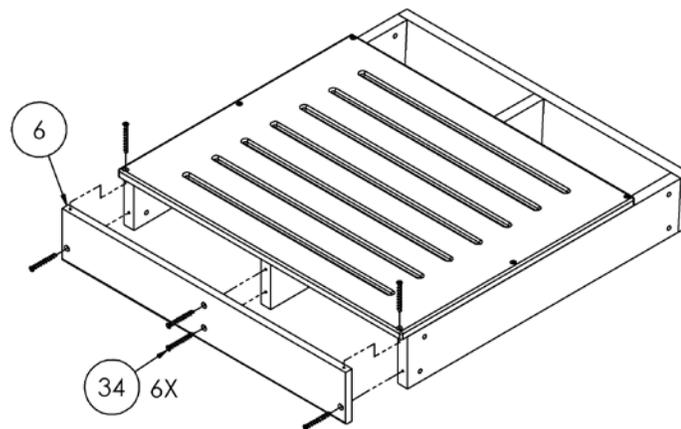


6. Seat Bottom Assembly should look like the pictures below when finished. Next make Seat Back Assembly.

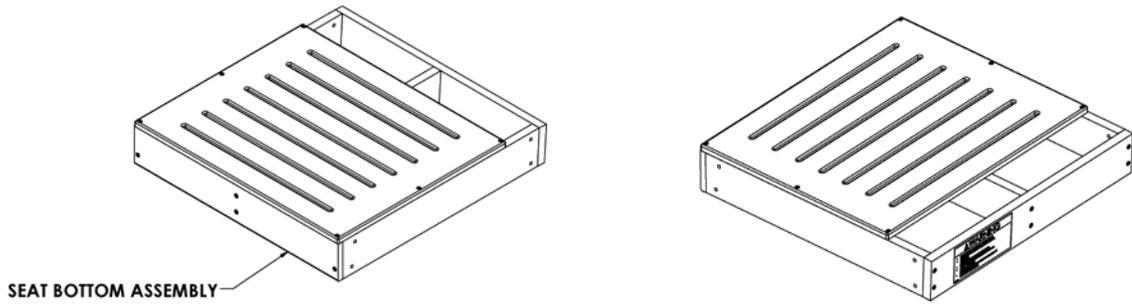


7. Attach part (2) to part (8) using screws (34).

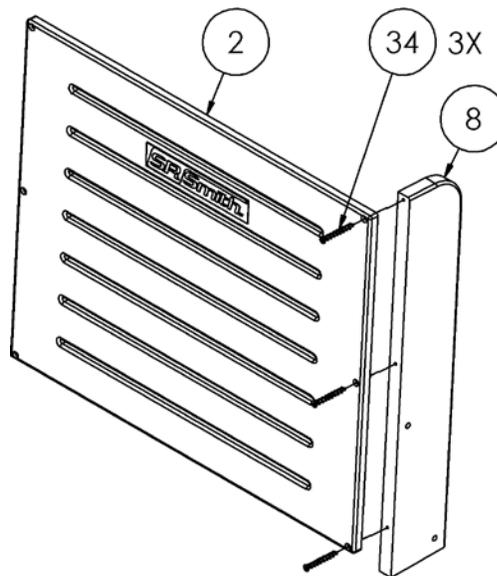


8. Attach part (7) to assembly using screws (34).

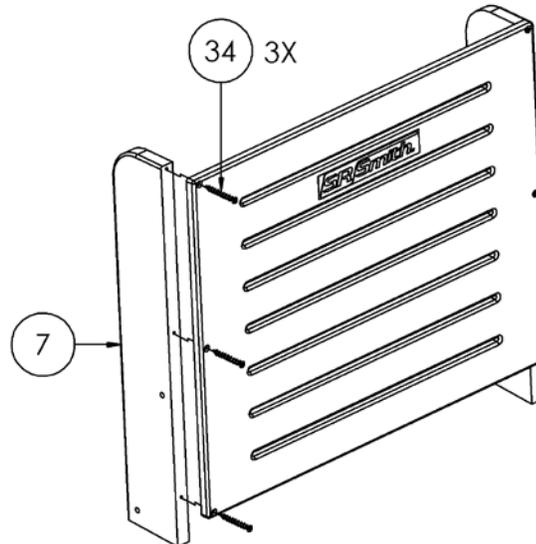


9. Seat Back Assembly should look like the pictures below when finished. Next make Footrest Assembly.

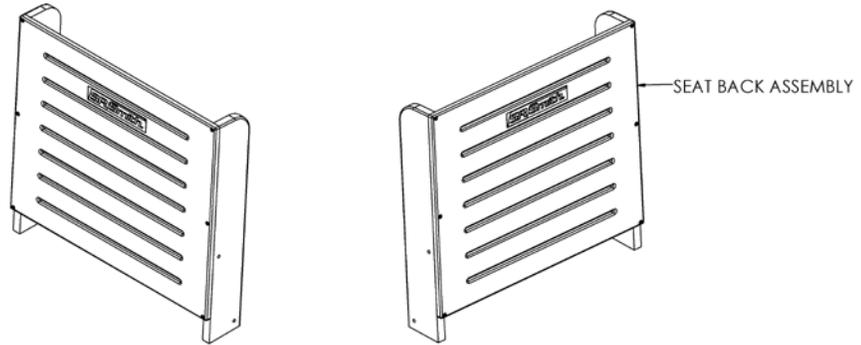


10. Attach part (21) to part (1) using screws (34).

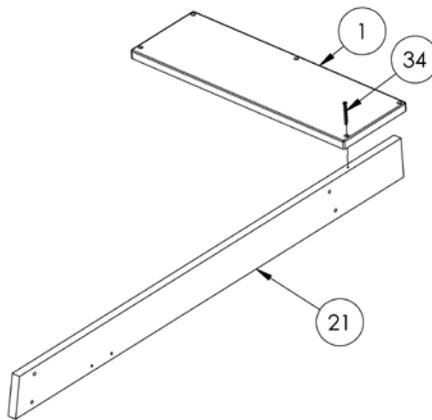


11. Attach part (22) to assembly using screw (34).

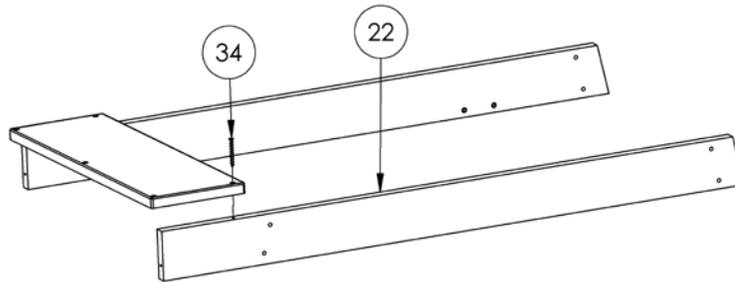


12. Attach part (17) to assembly using screws (34).

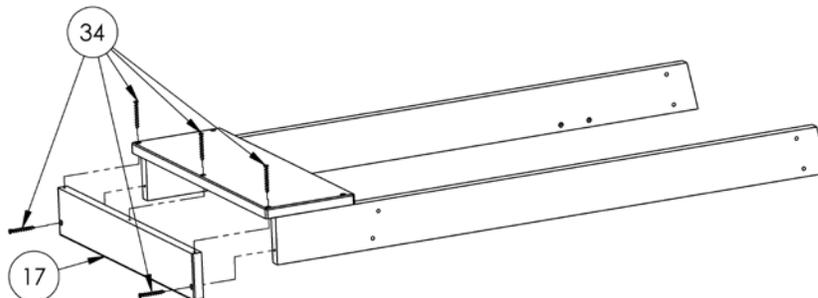


13. Finished Footrest Assembly should look like the picture below. Next attach legs using last 3 assemblies.

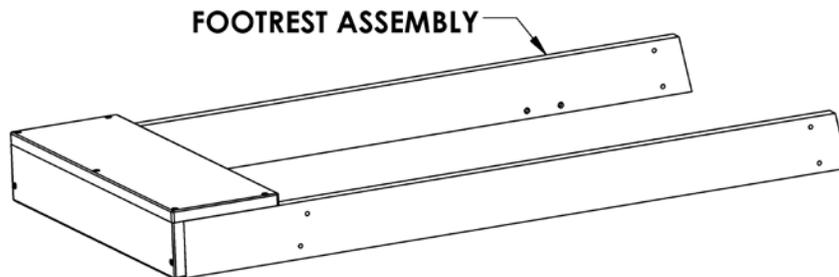


14. Attach Seat Back Assembly, Seat Bottom Assembly, and Footrest Assembly to leg (15) as shown using nuts (35), washers (36), and screws (37).

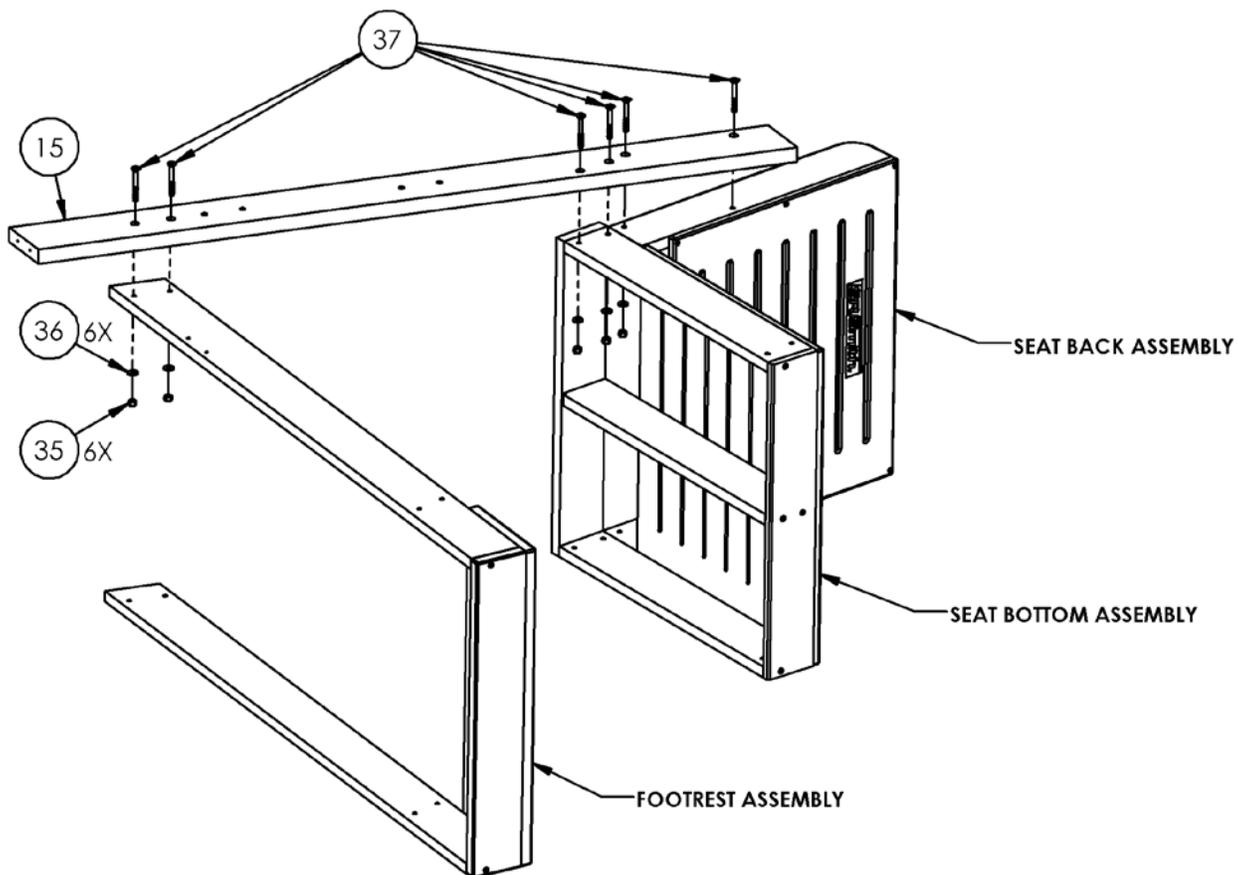


15. Next, attach leg (13) to assembly using nuts (35), washers (36), and screws (37).

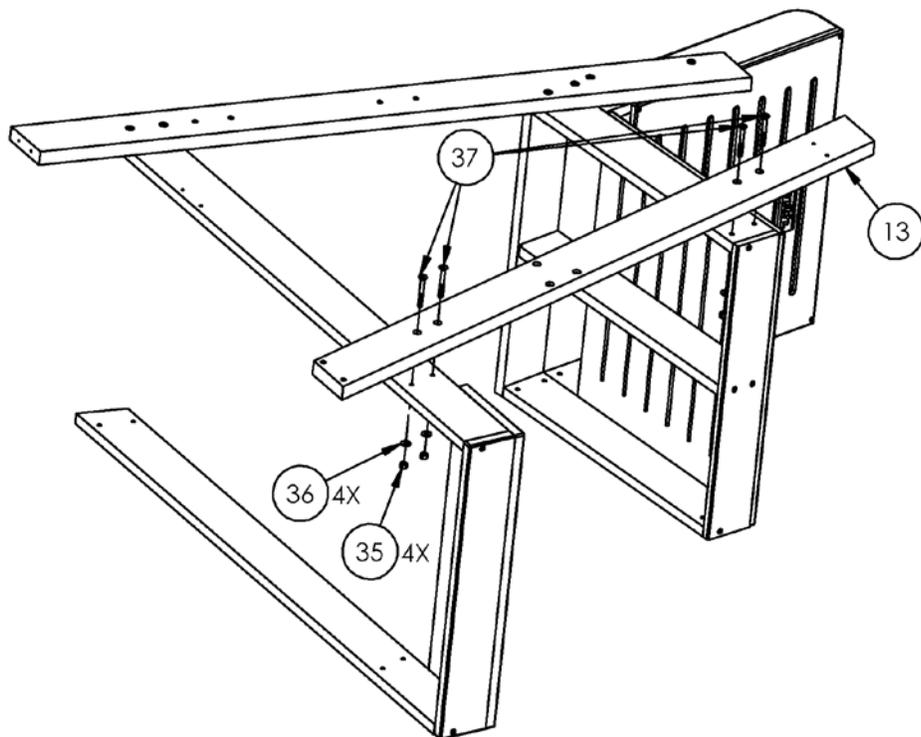


16. Attach step side (23) to assembly using nuts (35), washers (36), and screws (37).

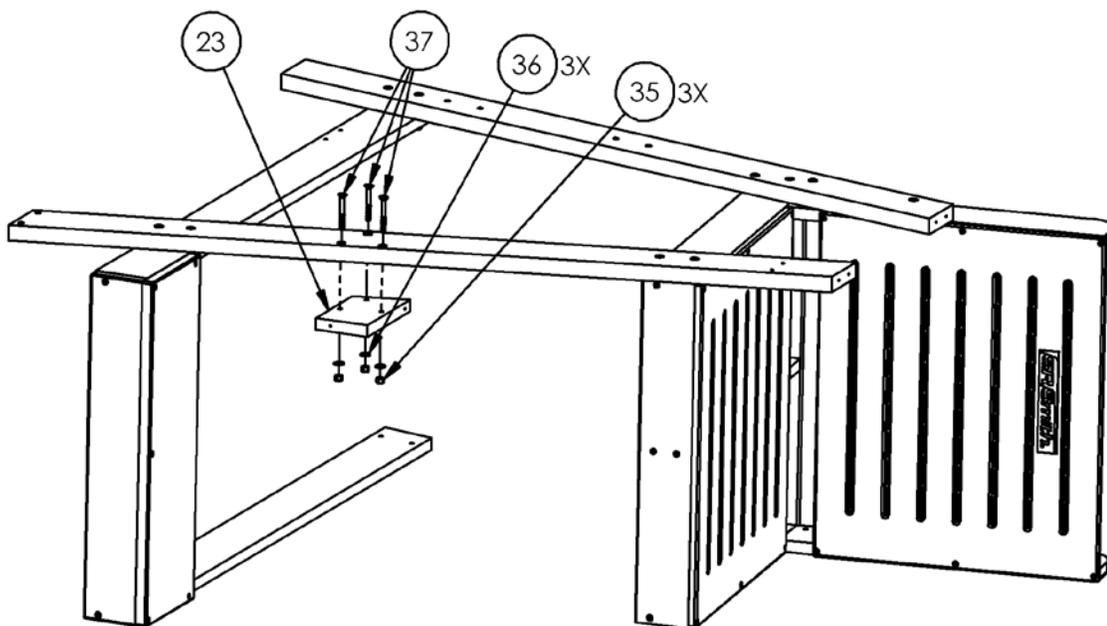


17. Now flip the chair over and attach leg (16) to assembly using nuts (35), washers (36), and screws (37).

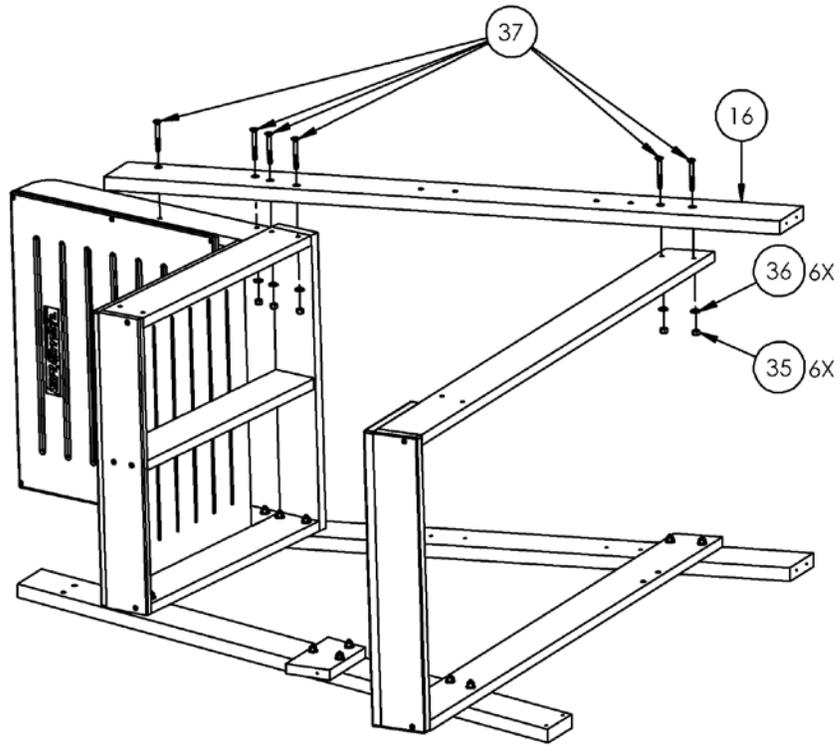


18. Now attach front base (29) to assembly using screws (34).

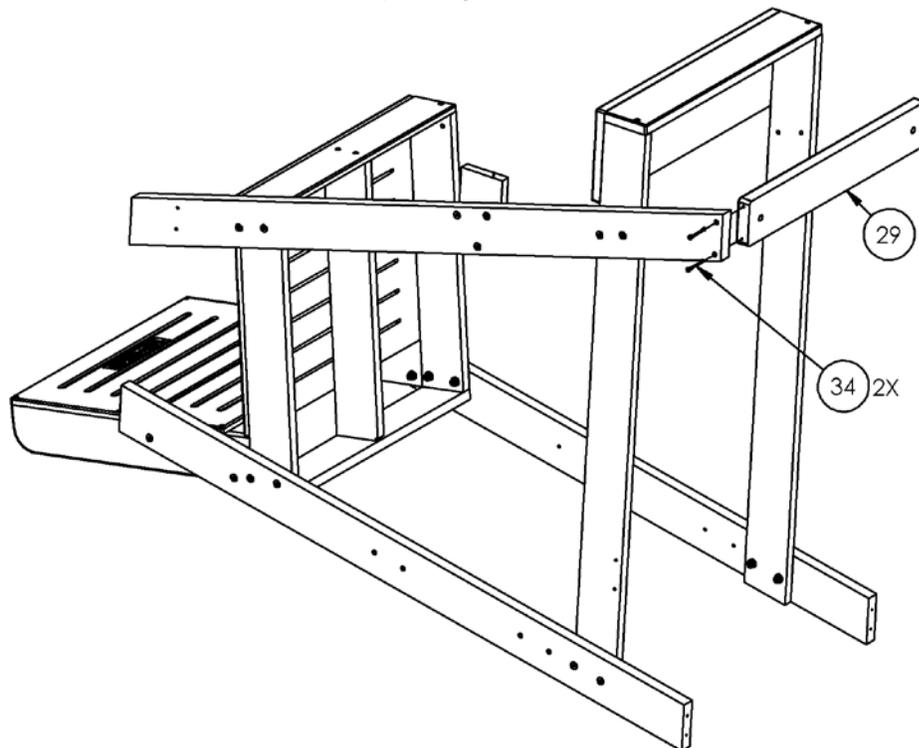


19. Attach leg (14) to assembly with nuts (35), washers (36), and screws (34 & 37).

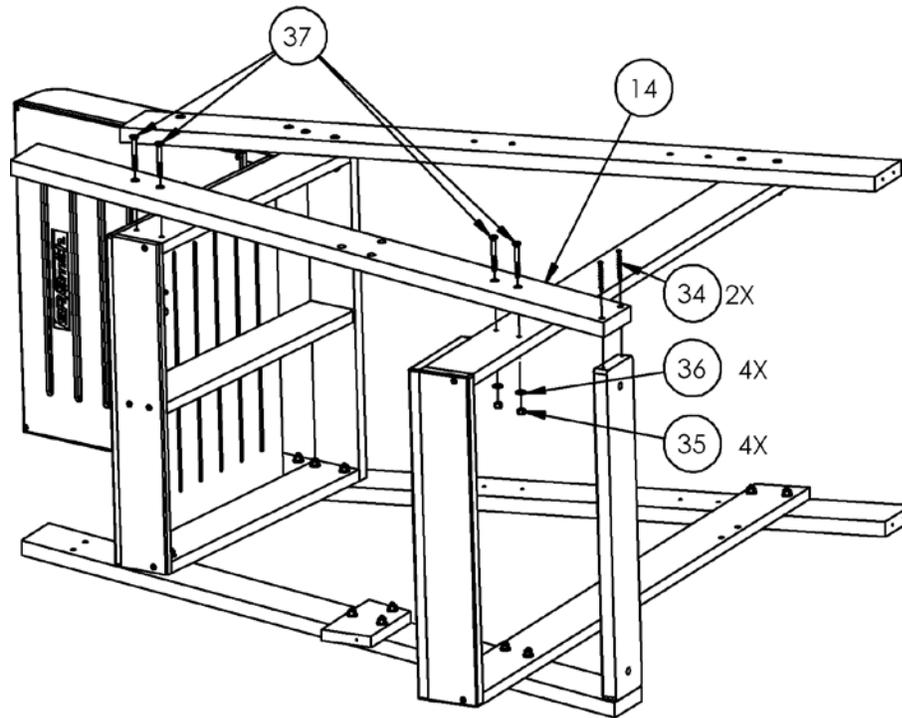


20. Now install the other step side (23) using nuts (35), washers (36), and screws (37).

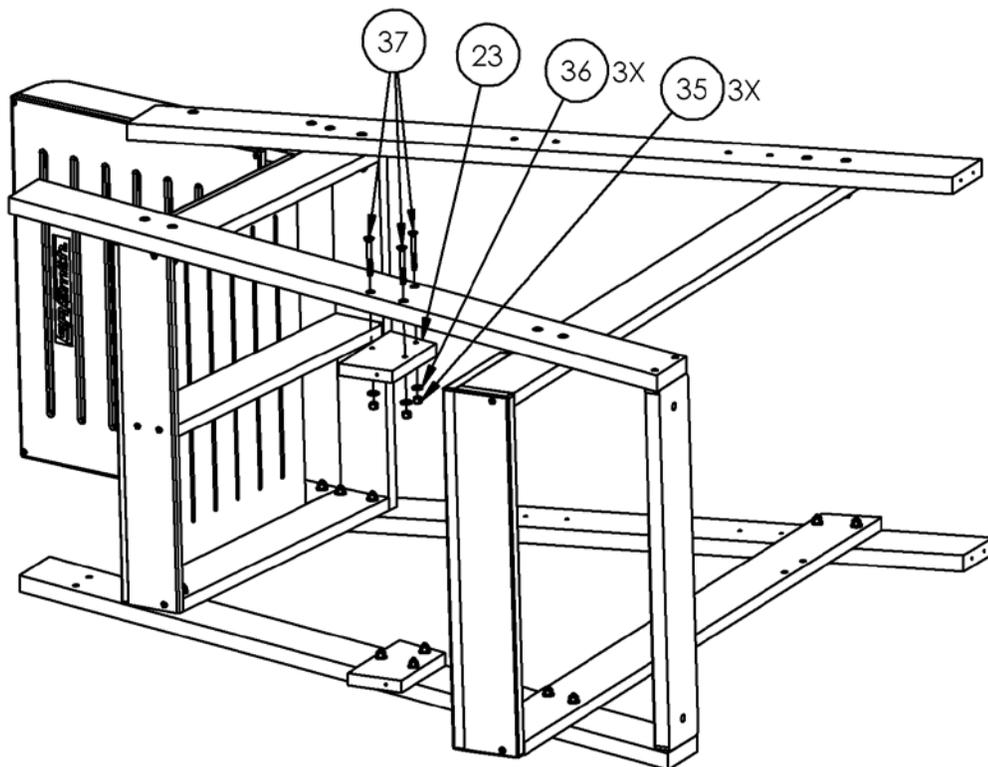


21. Next install the top step (1) using screws (34).

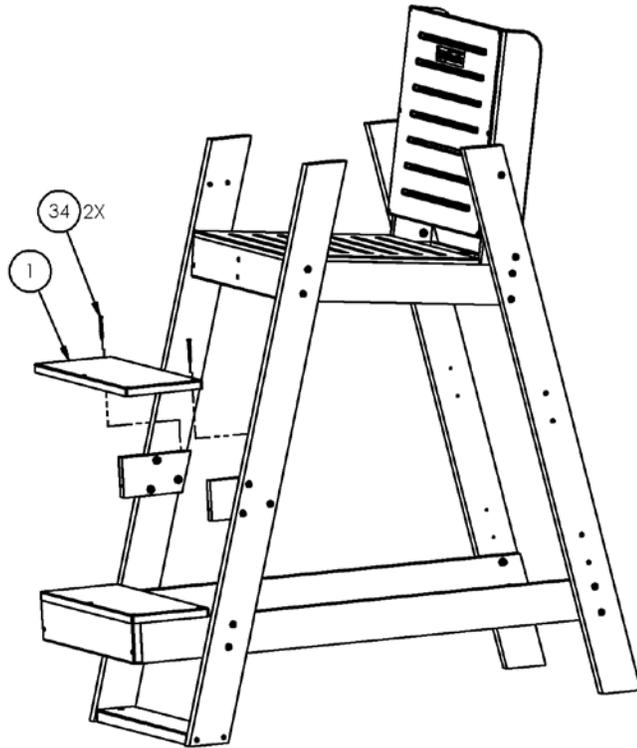


22. Attach footrest front (17) using screws (34).

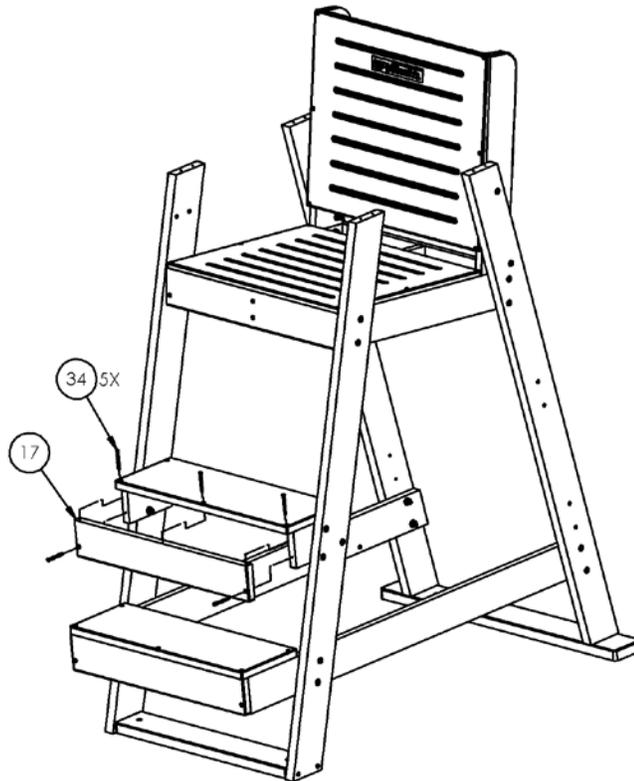


23. Attach arm rest (31) using screws (34).

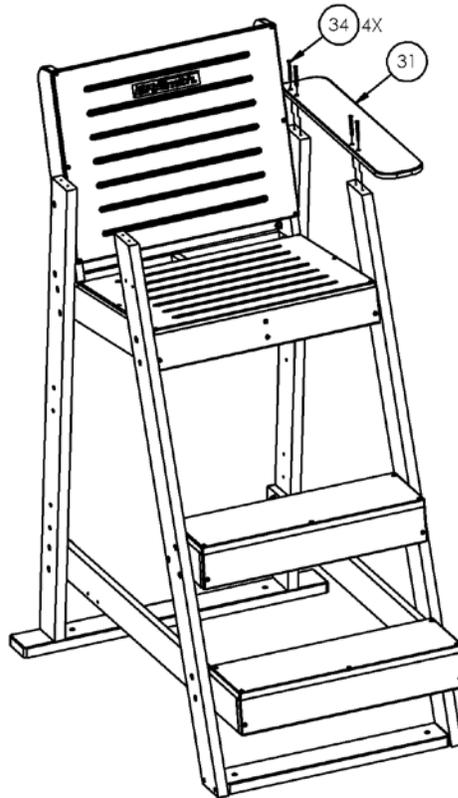


24. Attach arm rest (32) using screws (34).

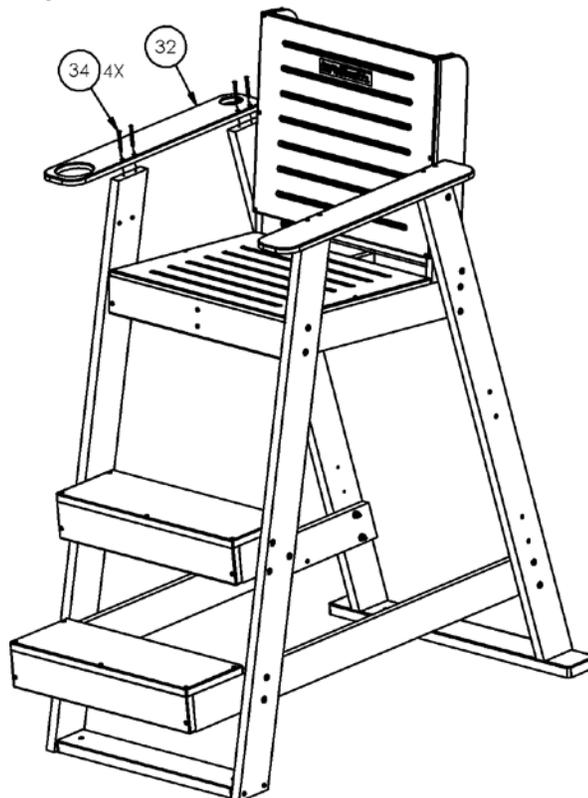


25. Attach braces (24) using screws (34).

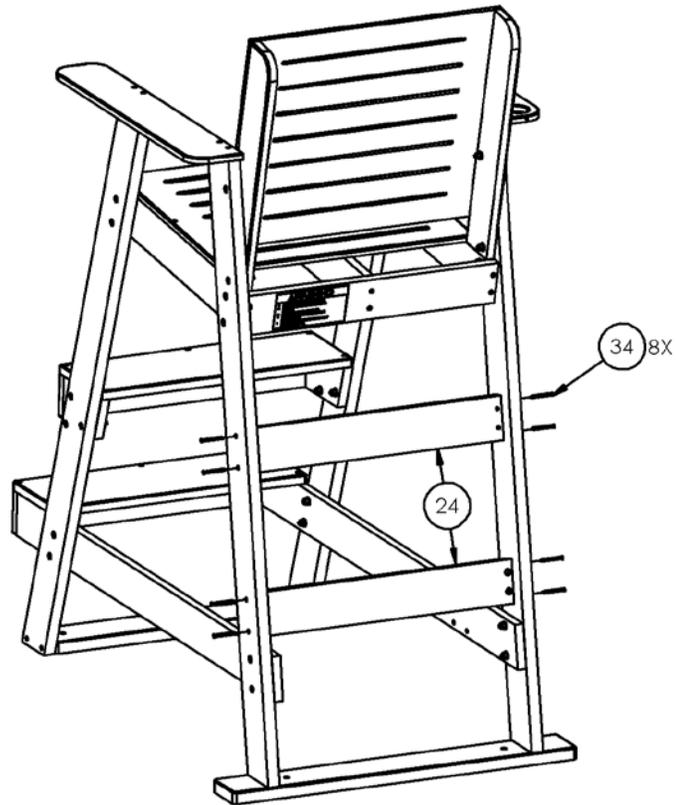


26. Attach cross braces (25 & 26) using nuts (35), washers (36), and screws (33).

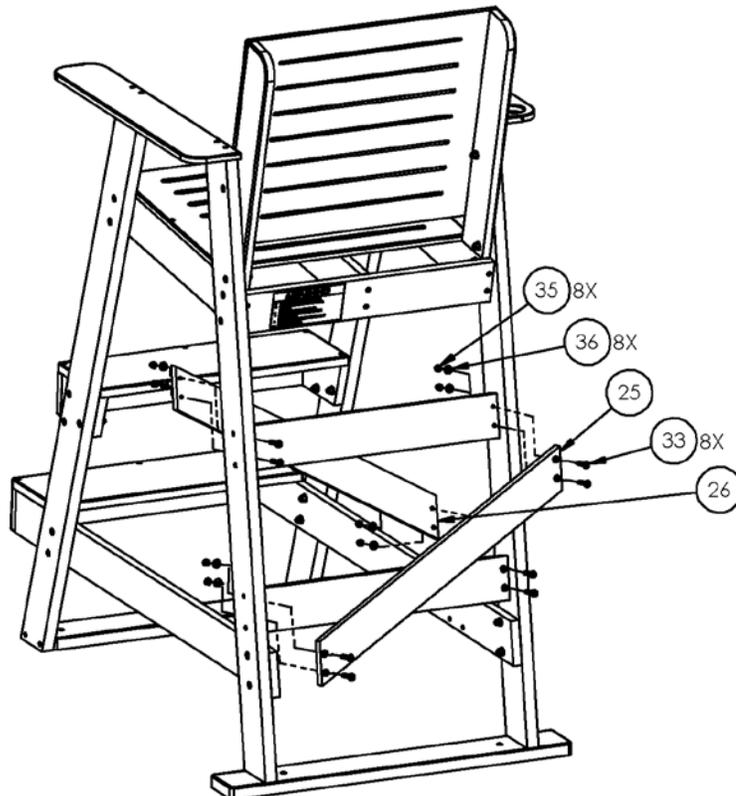


27. Attach cup holder (27) using screws (34).

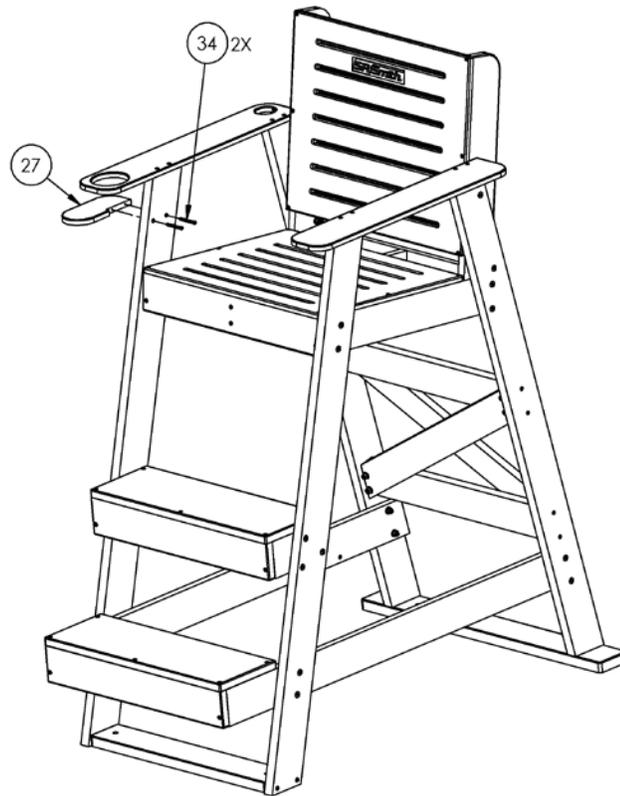

28. Attach umbrella mount (28) using screws (34).

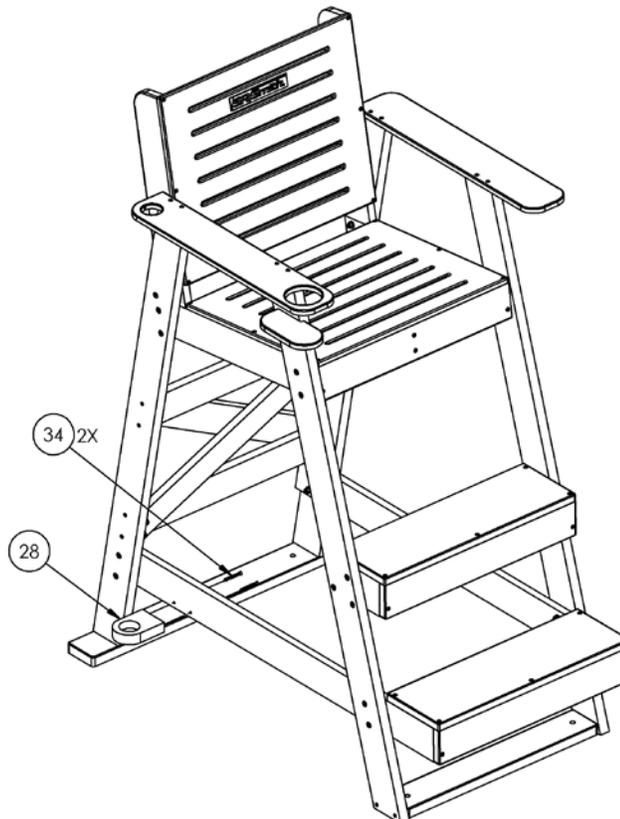

29. Assembly complete. Now, go back through assembly to ensure all hardware has been properly tightened.

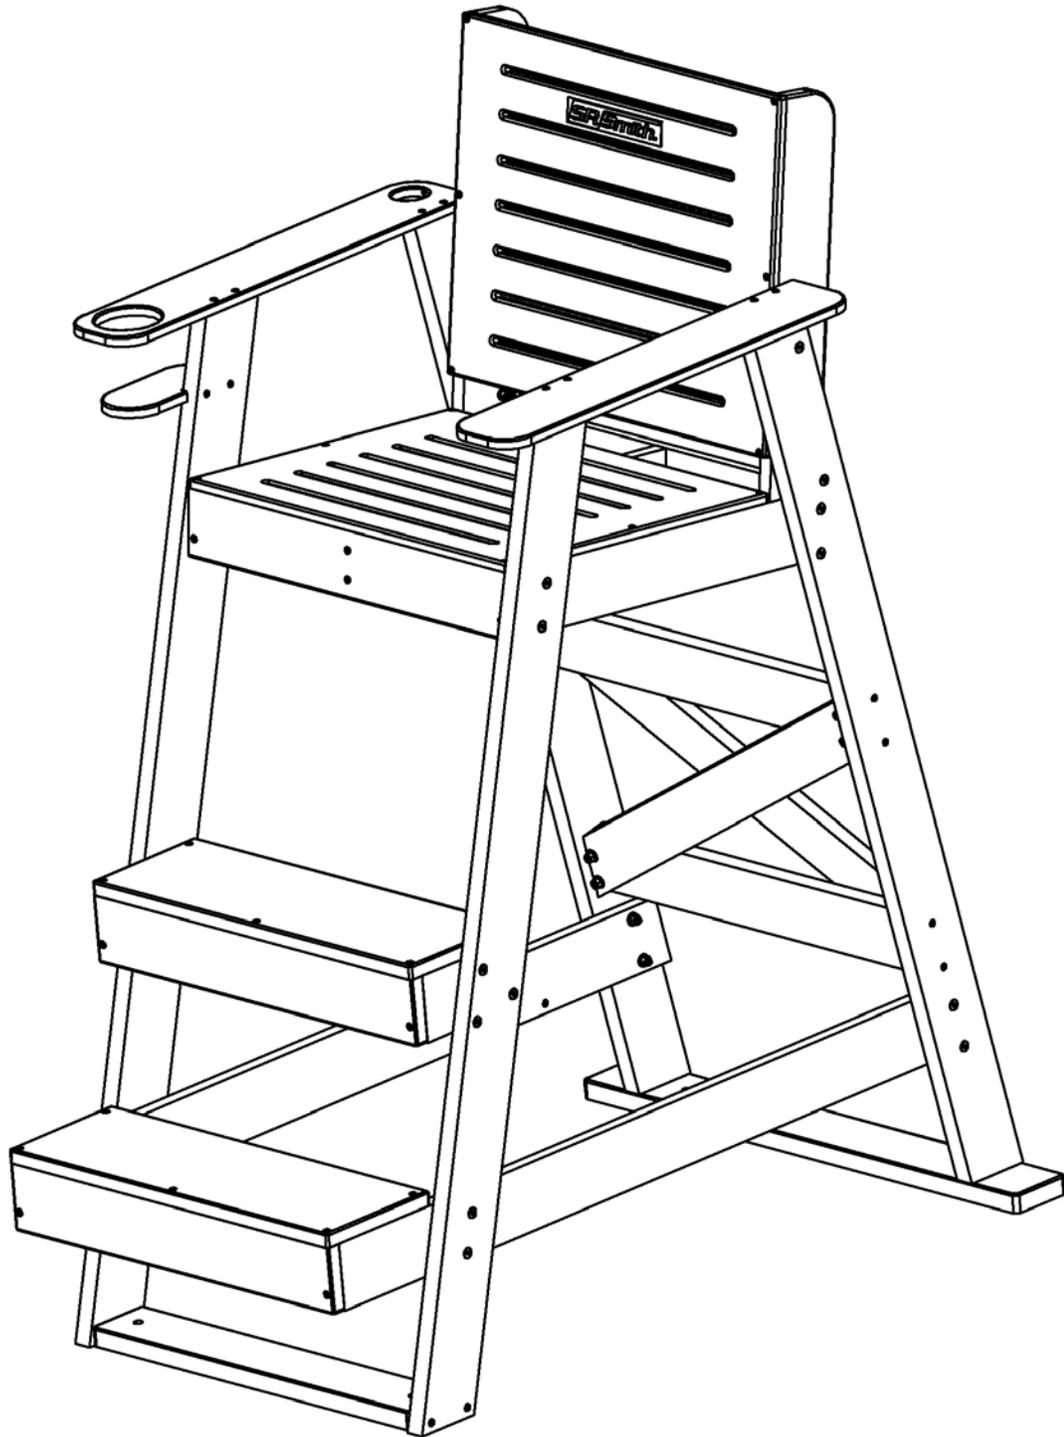

Warning: Chair required to be anchored to deck when using umbrella.
Recommended Anchor: When installing in concrete use type 316 stainless steel concrete anchor, 3/8" in diameter (not included)

